

REPLACING TENT HUBS

- Place the tent rods in such a position as to elevate the hub off the floor.
- Secure the tent rods with tape or string in the position held by the hub.
- Untie the double knot and remove the steel washer and rubber protector.
- DO NOT move the tent material from between the rods.
- Remove hub screws, taking note of the position of the hub, in case the broken hub falls to pieces. (the hub may be upside down - see moulded words).
- Place the hub top, WHITE DOTS Uppermost and flat side facing you, between the tent rods.
- Offer up the hub base to the top, aligning the WHITE DOTS, pulling together the top and bottom.
- Replace screws, tightening sufficiently to hold hub together. The final screw down must be done by tightening opposites. TOP BOTTOM / LEFT RIGHT etc...
- Re-thread cord through the new hub pull / push the material towards the hub; replace rubber protector, washer and double knot cord.

